

SENCOR[®]

Let's live!

SSS 1000 NYX MICRO

BT speaker


INSTRUCTIONS FOR USE



Supply content

BT speaker
Micro USB cable
User's manual

Description of the BT speaker

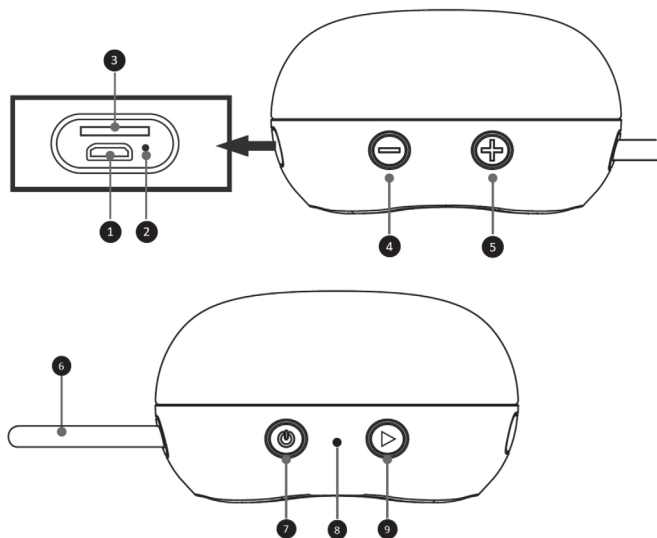

- 1 Micro USB charging connector
- 2 LED charge indicator
- 3 TF card slot
- 4 "-" / Play previous button
- 5 "+" / Play next button
- 6 Tie
- 7 On/off multifunction button
- 8 LED indicator
- 9 Play / pause button

Putting into operation

Before first use, be sure to read the safety instructions contained in this user's manual carefully.

We recommend that the BT speaker is fully charged before initial starting. To charge your device, use your power adapter and USB cable supplied together with the BT speaker. To start charging, connect the cable and your adapter to a power outlet and the BT speaker's socket (No.1 on "description of the BT speaker" figure). Hold down the power button (No. 7) to turn on the BT speaker. Turning on/off is indicated by a sound signal. To turn the BT speaker off, hold down the power On button.

LED indicator

The LED indicator shows the following states of the BT speaker:

- **Fast flashing white indicator** – The device is ready to be paired via Bluetooth and the audio source is connected
- **Slowly flashing white indicator** – Playback from the memory card is in progress
- **Solid white indicator** – The BT speaker is paired to another device via Bluetooth
- **Solid red indicator** – the BT speaker's battery is being charged

Pairing devices via Bluetooth

Turn on the BT speaker and find its Bluetooth name "SENCOR NYX MICRO" on the device you want to pair to, then start the pairing process. If you are requested to enter a pairing code while your device and the BT speaker are pairing, use the code: "0000". To cancel the BT connection, briefly press the on/off button (no. 7) and an acoustic signal indicates that the device is disconnected.

Note:

To ensure a stable Bluetooth connection, make sure that the distance between the BT speaker and your connected device is kept within 10m.

ATTENTION:

Some connected devices support common volume setting. If some of the connected devices do not support this feature, the volume setting will operate separately on each device.

On/off multifunction button

- Briefly press the BT button (no. 7 in the figure "description of the BT speaker") to start or stop music playback during a Bluetooth connection.

ATTENTION:

controlling smart devices using the BT speaker buttons may differ depending on the connected device

The "+" / "-" buttons (next/previous)

- To control the BT speaker volume, briefly press button 4 and/or 5 as shown on the "BT speaker description" figure.
- During playback using a Bluetooth connection or a memory card, you can switch to the previous or next track by long pressing the "+" / "-" button.

BT/TF Signal source button

A short press of the button changes the playback source (Bluetooth mode, memory card).

The incoming call to a Bluetooth connected paired device will be accompanied by an acoustic signal which will interrupt the music being played back. Press the play/pause button shortly once to answer/hang up call, press the play/pause button shortly twice to reject an incoming call.

Memory cards

Insert the memory card with the contacts pointing towards the back of the BT speaker (side with the passive radiator). When you insert a TF memory card, the BT speaker will automatically play back its contents. If there are no files for playback on the TF card, the BT speaker will switch into another playback mode (e.g. Bluetooth connection). To release the TF memory card, press it gently into the BT speaker with your fingernail or a blunt instrument and the card will release. Then you can carefully remove it with your fingernails (or with tweezers).

ATTENTION:

Due to a number of devices on the market, compatibility and playback support are not guaranteed for all media. The memory devices you want to connect should be tested in advance and/or formatted as FAT32. The playback of protected media, files or content stored inside them may fail.

Charging

A charged battery provides power for several hours of operation at normal volume levels. A high volume consumes more battery power; therefore, we recommend listening at normal volume levels. To charge the BT speaker, connect the charging adapter to a power socket and then to the BT speaker. The BT speaker will indicate low battery by acoustic signal.

ATTENTION:

For charging, use only the original accessories supplied with the appliance. To achieve the maximum battery lifetime, it is best to start charging the battery after the low battery power notification by the LED/sound indicators. Charge continuously until fully charged (no LED indicator on the device). When the battery operating time becomes very short, the battery lifetime has been used up; we recommend that you have the battery replaced at your authorized centre.

RECOMMENDATION:

If the unit is not to be used for an extended period of time, we recommend to fully charge the battery once every two to three months. We do not recommend storing the unit with a flat battery to prevent irreparable damage to the battery (loss of capacity).

Technical specifications

SSS 1000 NYX MICRO

Waterproof Bluetooth speaker

Features:

Waterproof speaker with IPX4 protection class

The speaker cover is made of premium fabric

Sound:

Maximum speaker output 3 W (Impedance: 4 Ω)

1 speaker + 1 passive radiator

Frequency response: 80 Hz –16 kHz

Total harmonic distortion: $\leq 1\%$

Inputs:

Bluetooth Audio 5.0

Connection distance: up to 15 m

TF card input

Other:

Textile strap for easy handling

Handsfree Function

Built-in rechargeable battery: 800 mAh Li-Ion

Up to 13 hours of playback time at 75% volume

Micro USB charging

Max. charging time 4 hours

Accessories: USB charging cable, user's manual

Dimensions: 85 x 85 x 50 mm

Weight: 148 g

Bluetooth	Version	5.0
	Maximum Transmitter Power	100 mW at 2,4 GHz - 2,4835 GHz

INSTRUCTIONS AND INFORMATION ON DISPOSING OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



The product meets the respective EU requirements.

FAST ČR, a.s. hereby declares that the radio equipment type SSS 1000 conforms to the 2014/53/EU Directive.

For the full version of the EU declaration of conformity, please refer to:
www.sencor.com

The text, design and technical specifications may be changed without prior notice and we reserve the right to make these changes.

The original version is in Czech.

Address of the manufacturer:

FAST ČR, a.s., Černokostecká 1621, Říčany CZ-251 01

Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

This warranty is void especially if apply as follows:

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Authorized service centers

Visit **www.sencor.eu** for detailed information about authorized service centers.