

SENCOR®

SBG 8900SS



HOT AIR GRILL

Translation of the original manual

 
 
 
 


SENCOR®

SBG 8900SS



A

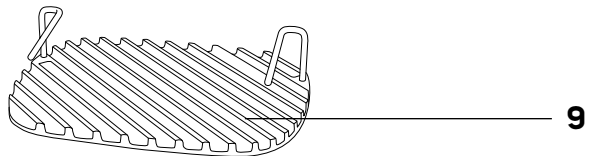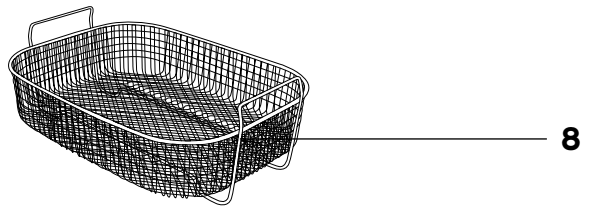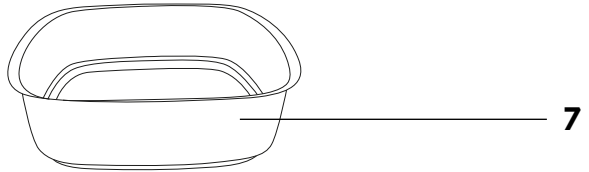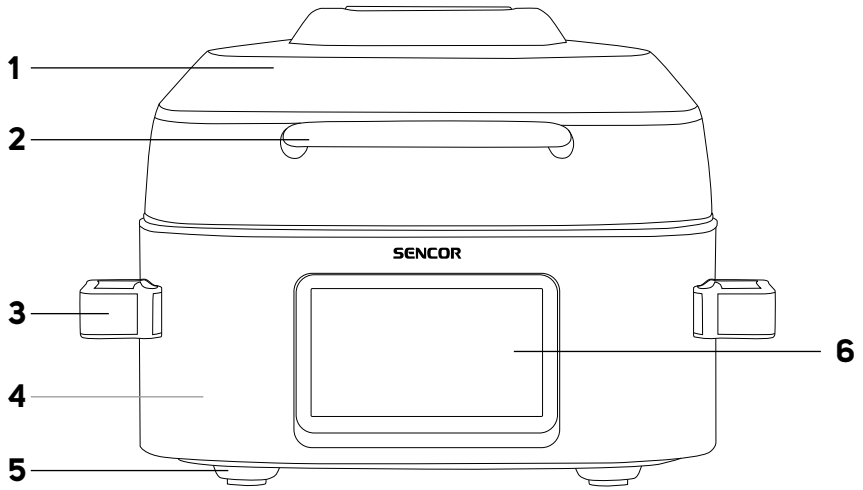

B

1

13

2

12

3

11

4

10

5

6

7

8

9



EN Hot air grill

Important Safety Instructions

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical, sensory or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use of the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by children unless they are older than 8 years of age and under supervision.
- Children under 8 years of age must be kept away from the appliance and its power cord.
- If the power cord is damaged, have it replaced in a professional service centre in order to prevent a dangerous situation. It is forbidden to use the appliance with the power cord damaged.
- Wipe the grill plates with a soft sponge slightly moistened in warm water. Follow the instructions in the "Cleaning and Maintenance" section.
- This appliance is not designed to be controlled using an external timer switch or a remote control.



CAUTION: Hot surface!

The temperature of accessible surfaces may be higher if the appliance is in operation. Take care not to touch the hot grill plate or the upper cover.

The appliance may remain hot even after being switched off. Before cleaning, maintenance or other manipulation, make sure that the appliance is completely cooled down.

- Before connecting the appliance to the mains socket, make sure that the nominal voltage indicated on the label of the appliance matches the voltage of the socket to which you want to connect the appliance.
- Connect the appliance only to a properly grounded socket. We recommend connecting the appliance to an independent electrical circuit. Do not use extension cords.
- Do not connect the appliance to a mains socket unless it is properly assembled.
- Do not touch the power cord or plug with wet hands.
- This product is designed for household use only. The appliance is also designed for personal use in areas such as:
 - staff kitchenettes in stores, offices and other workplaces;
 - hotel or motel rooms and other living areas;
 - agricultural farms;
 - bed and breakfast establishments.
- Do not use the appliance in an industrial environment or outdoors.
- The appliance is designed to process food. Do not use it for any other purposes than those intended.
- Do not place the appliance on windowsills, sink drain trays or unstable surfaces. Always place the appliance on a stable, flat and dry surface.
- Do not place the appliance on or near an electric or gas stove, do not place it in the vicinity of naked fire or appliances that are sources of heat.
- Do not use the appliance near a bathtub, sink, swimming pool or other water source.
- To prevent a risk of electric shock, do not submerge any part of the appliance in water or any other liquid.
- During operation, sufficient space for air circulation above and on all sides of the appliance should be provided. Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- Be especially careful when grilling fatty food to avoid being burnt by spluttering fat.
- Do not touch the grill plate's anti-stick coating with sharp or metallic objects. This may lead to damage.
- Always switch the appliance off and unplug it from the mains socket when left unattended, after use and before removing the grill plates, cleaning or moving.
- Allow the appliance to fully cool down before moving, cleaning or storing. Use the thermally insulated handle for carrying the appliance.
- Do not use the appliance to support various items.
- When disconnecting the power cord from the socket, always pull the plug, not the cord. Otherwise, damage to the power cord or the socket could occur.
- Make sure the power cord does not hang over the edge of a table and that it is not touching a hot surface.
- Do not use the appliance if it is not working correctly, if it was dropped on the floor, if it is damaged or has been submerged in water.
- To avoid a risk of electric shock, do not repair and/or modify the appliance on your own. Have all repairs or adjustments performed at an authorised service centre. By tampering with the appliance, you expose yourself to the risk of losing your legal rights regarding faulty performance or warranty for quality.

EN Hot air grill

User's Manual

- Thank you for purchasing our SENCOR product; we hope you will be satisfied with it.
- Before using this appliance, please familiarise yourself with the user's manual, even if you are already familiar with using similar types of appliances. Use the appliance only as described in this user's manual. Keep the manual for future reference.
- We recommend to keep the original packaging, packaging materials, receipt, and proof of the seller's liability or warranty certificate for a minimum of the duration of statutory right of faulty performance or warranty of quality. When transporting the appliance, we recommend packaging it again in the original box provided by the manufacturer.

DESCRIPTION OF THE APPLIANCE

A1 Lid	A5 Antiskid feet
A2 Lid handle	A6 Control panel
A3 Handrails (located on both sides)	A7 Grill pot
A4 Grill body	A8 Grill basket
	A9 Grill rack

DESCRIPTION OF THE CONTROL PANEL

B1 Numeric temperature display	B8 Fries button
B2 Temperature setting buttons	B9 Beef button
B3 Roast button	B10 Cancel button
B4 Air Fry button	B11 Start button
B5 Dehydrate button	B12 Cooking time setting buttons
B6 Bake button	B13 Numeric display of the cooking time
B7 Bake level setting button	

BEFORE FIRST USE

- Remove the hot air grill from the packaging and remove all promotional materials, including labels.
- Wipe the grill nouter surface with a slightly dampened sponge and then wipe dry.



Warning:

Never rinse the grill and/or power cord under running water or submerge in water or another liquid.



Note:

We recommend turning the grill on to the highest temperature before first use and leaving it in operation for about 5 minutes to burn out the grill and remove possible unpleasant odours during first use. During this time, you may also notice slight smoke. This is a normal occurrence.

STANDARD USE OF THE HOT AIR GRILL

1. Place the grill on a flat, firm and stable surface well away from the mains socket.
2. Insert the power plug into a power socket, an audible alert sounds and the display lights up shortly. Then "OFF" will be displayed.
3. Check that the lid is closed.
4. Select the cooking program by pressing the appropriate button, or adjust the temperature and cooking time to your taste.
5. Press **Start** to start the grill preheating. "PrE" will appear on the display.
6. When the grill is sufficiently preheated, "PrE" disappears from the display and "Add" lights up. Now it's possible to load the ingredients.
7. Open the lid and "DPEn" will appear on the display. Place the food you wish to toast inside. Close the lid and the temperature and

cooking time will appear on the display. The cooking starts along with the cooking time countdown.

8. You can change the cooking time and temperature at any time using the buttons to set cooking time or temperature.
9. If you need to check the food, open the lid, "DPEn" will appear on the display and the operation of the grill and the cooking time countdown will be interrupted. Close the lid to resume the operation of the appliance. The countdown will start again.
10. One minute before completion, an acoustic alert will sound.
11. As soon as the cooking time has elapsed, "donE" will start flashing on the display and an acoustic alert will sound.
12. Press the **Cancel** button to switch the grill into the standby mode. "OFF" will appear on the display.
13. Open the lid and remove the food.



Warning:

To open the grill, always use the thermally insulated handle.

14. After use, unplug the power cord from the mains socket.
15. You can cancel the cooking at any time by pressing the **Cancel** button.
16. Prior to cleaning, maintenance or other handling, let the grill cool down.



Warning:

During use, the grill is warmed up and may reach high temperatures. The grill remains hot even after use. Mishandling may lead to serious burns. Take extra care when handling the grill. We recommend using kitchen mitts. Always use the available thermally insulated handle.



Note:

Never use metal utensils or knives as they may scratch grill plate's anti-stick coating.

Temperature Setting

1. Select a cooking program.
2. The numeric temperature display shows the default temperature for the selected program.
3. Use the up/down arrows to adjust the temperature as needed.



Note:

Each cooking program has a different temperature setting range. For detailed information on individual programs, please refer to the table below.

Setting the cooking time

1. Select a cooking program.
2. The cooking time numerical display will show the default cooking time for the selected program.
3. Use the up/down buttons to set the cooking time as needed.



Note:

Each cooking program has a different range of cooking time settings. For detailed information on individual programs, please refer to the table below.

Cooking program table

Program	Default temperature	Temperature Setting	Default cooking time	Setting the cooking time	Note
Roast	200°C	150–250°C	00:30	00:01–01:00	This cooking program is suitable for roasting meat, fish, smoked goods, etc.
Bake	175°C	120–220°C	00:30	00:10–02:00	This program is suitable for baking sandwiches, panini etc.
Air Fry	200°C	150–230°C	00:20	00:01–00:30	This program is suitable for cooking food on the principle of a hot air fryer.
Dehydrator	40°C	--	02:00	00:15–24:00	This cooking program is suitable for drying food at a constant temperature.
Fries	200°C	--	00:18	00:01–00:30	This cooking uses the frying pot principle. We recommend that you open the lid during cooking and mix the food properly to ensure that it is cooked evenly.
Beef	230°C	--	00:12	00:01–00:30	This program is suitable for cooking beef steaks.

Air grill cooking program

- This program is suitable for grilling meat using the hot air function.
- Press the **Air Grill** button several times to select the desired browning level. Each time it is pressed, the respective icon will light up. The display shows the default temperature and cooking time.
- We recommend using the grill rack.

Air Grill Program	Default temperature	Default cooking time	Setting the cooking time
Low temperature	200°C	00:15	00:01–00:30
Medium temperature	220°C	00:15	00:01–00:30
Medium high temperature	240°C	00:15	00:01–00:30
High temperature	265°C	00:10	00:01–00:30

TIPS FOR GRILLING MEAT AND SAUSAGES

- To achieve optimum results, cut the meat into equally thick slices.
- In order to prevent the meat from being tough and dry, we recommend to avoid salting before grilling. We recommend seasoning the meat with salts or spices only after thermal processing.
- Before grilling marinated meat, use paper towels to dry excess marinade. Some marinades may contain large amounts of sugar, which may then burn.
- During grilling, do not prick the meat to avoid juice flowing out and meat being stiff and dry.
- Do not dry out the meat by grilling it for too long.
- Always make sure that chicken meat is thoroughly cooked.
- You need not prick pre-cooked sausages before grilling.
- Using the contact grill for grilling meat with heavy bones, such as T-bone steaks, is not recommended.
- The food must be completely defrosted before toasting.

CLEANING AND MAINTENANCE

- Clean the grill after each use. Before cleaning, the grill must be switched off, unplugged and completely cooled down, including accessories.



Warning:

To prevent the risk of electric shock, do not submerge the appliance, plug or power cord in water or any other liquid.

Grill plate and grill basket

- Wash the grill plate and basket in warm water with a small amount of washing-up liquid. Use a soft sponge. Rinse and wipe dry.

Exterior surface

- To clean the exterior surface, use dry or slightly dampened cloth. Then thoroughly wipe until dry.



Warning:

Never use wire cloths, abrasive cleaners, petrol, etc. for cleaning.

Storage

- If the appliance will not be used for an extended period, unplug it from the power socket, let it cool down, and clean it following the instructions provided above.
- Before storing, ensure that the appliance and all accessories are thoroughly clean and dry.
- Store the appliance in a dry, clean, and well-ventilated place away from extreme temperatures and out of the reach of children or pets.

TROUBLESHOOTING

Problem	Solution
The "Add" message is shown on the display.	The grill is preheated and you can add food.
The E2 error message is shown on display.	Contact your authorized service centre.
How can I interrupt the cooking process?	Open the lid and "Open" will appear on the display. The cooking and countdown process is interrupted. To resume the cooking process and countdown, close the lid.
Can I put the grill basket/plate on my kitchen line?	We recommend placing the grill basket/plate on a heat-resistant mat as they heat up during operation. Always use protective kitchen mitts.
The cooked food is not crunchy enough.	Check that the food is evenly distributed in the grill basket in a single layer. During cooking, shake the basket slightly or turn the food around with kitchen tongs.

TECHNICAL SPECIFICATIONS

Rated voltage range 220–240V-
 Rated frequency 50/60Hz
 Rated power input 1,660W

We reserve the right to change the text and technical specifications.

INSTRUCTIONS AND INFORMATION ON DISPOSAL OF USED PACKAGING MATERIAL

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSING OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the products or accompanying documents indicates that used electrical and electronic products should not be disposed of with regular municipal waste.

For proper disposal and recycling, take these products to designated collection points. Or in some European Union states or other European countries the products can be

returned to the local retailer when buying an equivalent new product. Disposing of this product correctly helps save

valuable natural resources and prevents damage to the environment by improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For Business Entities in European Union States

If you want to dispose of electric or electronic devices, ask your retailer or supplier for the necessary information.

Disposal in Other Countries Outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product complies with all the essential requirements of the EU directives that apply to it.

