

Get Perfectly Cracked Eggs - Every Time

EZCracker™

Egg Cracker/Separator



INSTRUCTIONS

PLEASE READ ALL INSTRUCTIONS PRIOR TO USE.



Usage

1. See **Diagram 1**. Place the egg into the EZ Cracker's cradle so the short and long ends of the egg fit through.
2. See **Diagram 2**. Hold the unit over bowl or directly over the frying pan and squeeze both handles together to crack the egg. Dispose of the egg shell.

Using as an Egg Separator:

1. See **Diagram 3**. Align the notches of the attachment with the notches on the bottom half of the main unit. Insert the Egg Separator into the unit.
2. See **Diagram 4**. Hold unit over bowl and squeeze both handles together to crack the egg. The Egg Separator will catch the yolk and let the white through.



Egg Separator Attachment

Cleaning

CAUTION: When cleaning blade, do not touch the sharp edges with bare hands.

Wash the unit and egg separator attachment in warm soapy water.

EZ Cracker is not dishwasher safe.
Do not place in dishwasher.

Effortlessly:

- **Crack eggs with one simple motion**
- **Separate egg whites**



Diagram 1



Diagram 2

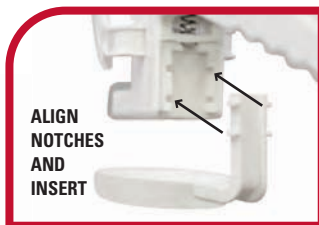


Diagram 3



Diagram 4

Visit us at: www.EZCracker.com

EZ CRACKER™ STYLE #8122
Distributed By EMSON® NY, NY, 10001 ©Copyright 2009
EMSON® All Rights Reserved. Printed In China.