

General Safety Instruction

- Read the operation instructions carefully before putting the appliance into operation and keep the instruction, the receipt and if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put in water.
- **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.
- Do not operate the machine without supervision. If you should leave the work place, always switch the machine off or remove the plug from the socket (pull the plug itself, not the lead).
- To protect children from the dangers posed by electrical appliances, make sure that the cable is hanging low and that children do not have access to the appliance.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions”.

Special safety instructions for this device.

- Keep the device away from water and moisture such as, for example, bath tubs, shower areas or even persons taking a bath! Such situations constitute a **DANGER TO LIFE** through electric shock
- Attention: The nozzles become hot during operation!
- If the hair dryer is used in the bathroom, remove the mains plug after use as the close proximity of water represents a hazard. This also applies when the hot air brush are switched off.

- As additional protection we recommend the installation of a fault current protection device (RCD) with a rated current of not more than 30 mA in the wiring system of the bathroom. Please contact an authorized electrician for advice.

Initial and General Use

1. Fully unwind the mains cable.
2. Make sure that the hair dryer voltage (see name plate) and the mains voltage match.
3. Fit on a nozzle. You can dry single hair locks by concentrating the flow of hot air with the hairdressing nozzle.
4. Insert the plug into a duly installed 230V/50Hz protective contact socket.
5. Shift the switch on the handle to one of the desired heat / blowing levels:
 - Position 0: OFF
 - Position 1: Low airflow and low temperature
 - Position 2: Medium airflow and medium temperature
 - Position 3 : Strong airflow and high temperature
6. After use shift the switch to position 0 and pull out the plug. Leave the device to cool before putting it away!

Cleaning and Care

Clean the air suction opening from time to time with a fine brush. Clean the hosing with a soft, dry cloth without additives.

This device has been tested according to all relevant current CE guidelines, such as electromagnetic compatibility and low voltage directives, and has been constructed in accordance with latest safety regulations.

Subject to technical changes without prior notice!