


PRECAUTIONS:

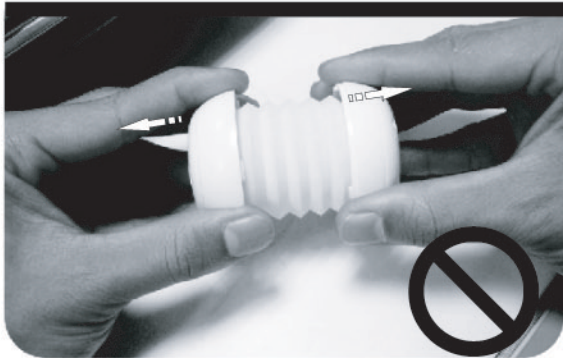

DO NOT USE FORCE WHEN EXPANDING THE SPEAKER. ONCE OPENED THE SPEAKER WILL EXPAND ON IT'S OWN.



Please do not put the product in any damp or high-temperature areas;

Please do not disassemble to avoid electrical shock;

Please do not insert anything conductive into the sound box body.

YOU MAY ALSO LIKE:

AA CHARGER W/ LED



CELL PHONE FLASH



KEY LIGHT



GREAT PRODUCTS, VIATEKPRODUCTS.COM

VIATEK 6881 Kingspointe Pkwy Ste 7 Orlando, FL 32819 407.248.0123

US • MX • UK worldwide

For customer service call 888.7.VIATEK or visit us online at viatekproducts.com

Pour le service à la clientèle appelez le 888.7.VIATEK ou visitez viatekproducts.com

Para servicio al consumidor llame al 888.7.VIATEK o visite viatekproducts.com

VIATEK No Question Protection - Protect your product with Viatek Warranty Services. Product is replaced or reimbursed 100%. Protection for 1-year beyond our standard warranty. No shipping charges, no deductibles. Your product is protected from any mechanical or electrical failures caused by power surges or manufacturer's defects. Just \$5.95, order online at viatekproducts.com today.

© 2008 VIATEK CONSUMER PRODUCTS GROUP, INC. All specifications and prices are subject to change without notice. All rights reserved.

VIATEK

model MS01

MYb(oo)m

rechargeable capsule speaker

Directions for Use



CONNECT



Read Instructions Before Operating



MADE IN CHINA

Dear Valued Customer,

Thank you and congratulations on your purchase of this innovative product. We back our product with a Viatek certified warranty. Your satisfaction is very important to us.

For operational questions or replacement parts please call: 888-7VIATEK or contact your local VIATEK dealer.

Visit us on the web at www.viatekproducts.com for new product updates and information. Also please email us with any comments or questions at cs@viatekproducts.com

We look forward to serving you, now and in the near future.


Enjoy your Viatek Designed Product!

Kelli M. Lentine

Kelli M. Lentine
President



PARTS DIAGRAM:

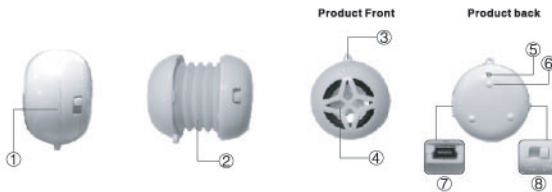

- ① Closed
- ② Open
- ③ Key Chain Loop
- ④ Speaker
- ⑤ Power Light
- ⑥ Base Grips
- ⑦ USB /Audio port
- ⑧ Power and Volume Control

NOTE: Retractable Earphones are not included on the Original models: (MS01-B / MS01-W) A non-retractable earphone cord is provided.



- ① USB Charger /Audio port
- ② General USB port
- ③ 3.5mm audio plug

⚠ The cable is not fit into others equipment data connection except of this product.

USE:

Hold one end of the speaker in your right hand and the other in your left. Turn the bottom of the speaker clockwise while turn the top counter clockwise until the alignment bar is in the unlock position. The speaker will then expand. See diagram A and B.

CHARGING & CONNECTIONS:

To charge, connect the USB cable ① to USB / Audio port ②. Then connect the USB ④ to your computer or USB device.

Charge life depends on the amount of usage and volume setting. Battery life up to 4 hours.

Once charged connect the USB cable ① to USB / Audio port ②. Then connect the 3.5mm standard audio plug ③ to your digital media device.

