

All-purpose chopper CHOP-CHOP Instructions

Assembly

The "CHOP-CHOP" all-purpose chopper consists of only 4 components (see figure):

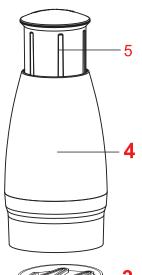

- 1. Chopping bowl / keep-fresh box with lid
- 2. Transparent lower section
- 3. Blade guide
- Upper section with cutting blade at the bottom and plunger (5) at the top.

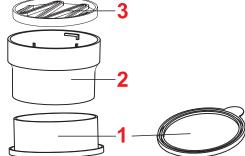

Initial operation

We recommend that you clean the "CHOP-CHOP" before using it for the first time. You can disassemble it for this purpose in just a few steps.

Disassembly

The following 4 steps are required:

- 1. Remove the chopping bowl (1) from the "CHOP-CHOP".
- 2. Place the all-purpose chopper on the work surface.
- 3. Hold the housing and turn the upper section (4) anti-clockwise to the limit stop. Remove by pulling upwards.
- 4. Turn the upper section (4) so that the blade faces upwards. CAUTION! Please be careful, as the blade is sharp!
 - Carefully remove the blade guide (3) from the upper section.

Cleaning

Once the "CHOP-CHOP" has been disassembled, you can clean all the parts. We recommend using running water and a brush.

Where necessary, detergent can also be used. The upper section with the blade should be cleaned under running water, using a brush only! After cleaning, the upper section should be dried with the blade facing downwards. Please do not use a cloth to dry the blade, as this poses a high risk of injury!

Operation

- 1. Fill the chopping bowl with onions or vegetables and replace the upper section.
- 2. Place the complete all-purpose chopper onto a level work surface.
- 3. Hold the "CHOP-CHOP" with one hand while pressing down (knocking) evenly with the other, open hand.
- 4. The cutting device will be automatically retracted.
- 5. During this process, the blades will automatically turn.

Please note: When processing larger amounts, you may want to use a cutting board instead of the chopping bowl to divide the food into suitable portions. For quick and efficient results, clean the chopper immediately after use.

General safety instructions

The all-purpose chopper is not a toy and must be handled with the necessary care.

Please keep the chopper away from children!

We hope that you will enjoy preparing your next recipes with the "CHOP-CHOP" all-purpose chopper!

