

Rocking Teddy Instructions



Operation:

1. There are two ways to connect to music sources:

Through a short wire from the bear's chest, connect it to a MP3/MP4 player or an iPod. Put the player in the bag. The bear will shake it's head, hands, and butt to the rhythm of the music.



Through the INPUT port on the bear's left shoe, connect it to a desktop or a notebook computer. For power supply, use a USB wire connecting the DC6.0V port on the bear's left shoe to the computer's USB port or use an adaptor connecting to a power socket.



2. Turn the switch to the left, to power off. The bear will stop dancing and singing.

Turn the switch to the right, to power on. The bear will start dancing and singing.

Battery Specification:

4 x AA batteries.

To replace batteries, unscrew, open the battery compartment cover and replace the exhausted batteries with new ones. Please note the correct polarities of “+” and “—”.

